



TJERNLUND PRODUCTS, INC.

1601 Ninth Street • White Bear Lake, MN 55110-6794
PHONE (800) 255-4208 • (651) 426-2993 • FAX (651) 426-9547
Visit our web site • www.tjernlund.com

950-8353 X2D REPLACEMENT HOOD INSTRUCTIONS

IF REPLACING AN OLDER STYLE HOOD THAT USES THE (6) PLASTIC PUSH CLIPS WHERE X2D HOUSING MOUNTING PLATE DOES NOT HAVE THE BENT FLANGE ON TOP FOR HOOD, FOLLOW STEPS BELOW.

1. Remove / cut caulking around existing X2D hood.
2. Remove old hood by pulling from X2D and remove (4) screws that hold X2D housing to house, (See Diagram A).
3. Place adapter plate with bent flange on top with bend facing away from the house over existing X2D housing flange and secure with (4) screws removed in step 1, (See Diagram A).
4. Hook X2D hood on adapter plate top flange, center and bend tab over on each side on bottom of hood, (See Diagram B).
5. Apply a bead of caulk around hood and siding and insert screen in hood, (See Diagram C).

DIAGRAM A



ADAPTER PLATE WITH FLANGE ON TOP AND TABS ON BOTTOM.

REMOVE (4) SCREWS THAT HOLD X2D HOUSING TO HOUSE. PLACE ADAPTER PLATE WITH BENT FLANGE ON TOP AND FACING AWAY FROM THE HOUSE OVER EXISTING X2D HOUSING FLANGE.

DIAGRAM B



HOOK X2D HOOD ON ADAPTER PLATE TOP FLANGE, CENTER AND BEND TAB OVER ON EACH SIDE ON BOTTOM OF HOOD.

DIAGRAM C




APPLY A BEAD OF CAULK AROUND HOOD AND SIDING. INSERT SCREEN IN HOOD.

IF REPLACING A NEW STYLE HOOD THAT DOES NOT USE THE (6) PLASTIC PUSH CLIPS WHERE THE X2D HOUSING MOUNTING PLATE ALREADY HAS THE BENT FLANGE ON TOP FOR HOOD, FOLLOW STEPS BELOW.

NOTE: Discard Adapter Plate included in the kit if the existing X2D hood does not use the (6) plastic clips. The X2D housing mounting plate already has the bent flange on top for hood to hook on to.

1. Remove / cut caulking around existing X2D hood.
2. Remove old hood by opening fold over tabs in both lower corners of X2D hood unhinge hood from top flange, (See Diag. D).
3. Hook X2D hood on housing top flange, center and bend tab over on each side on bottom of hood, (See Diagram D).
4. Apply a bead of caulk around hood and siding and insert screen in Hood, (See Diagram E).

DIAGRAM D

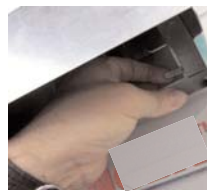

HOOK X2D HOOD ON HOUSING TOP FLANGE, CENTER AND BEND TAB OVER ON EACH SIDE ON BOTTOM OF HOOD.

DIAGRAM E



APPLY A BEAD OF CAULK AROUND HOOD AND SIDING. INSERT SCREEN IN HOOD.